
Setup A Two Way Radio Over IP Link By RT-RoIP1 and Skype

This is a quick guide to setup a two way radio over IP link by using RT-RoIP1 and Skype. After the link is established, all of the handheld can communicate with each other on both sites.

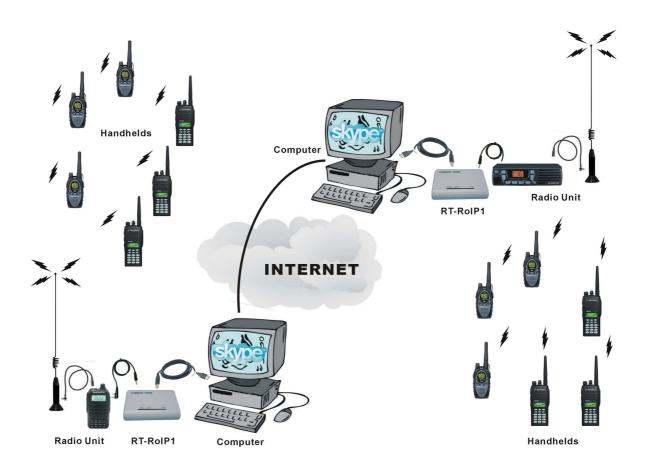

1. System Installation

Please refer to the User's Guide of RT-RoIP1 for the details of the system installation.

Bear in mind that the system MUST use external antenna for the Radio Unit.

2. Skype Installation

Please browse http://www.skype.com to download and install the Skype to both side of your computers.

3. Create Accounts

Create different accounts and sign in the accounts on the computers.




4. Setup Skype

• Click on [TOOLS---Options] to open the "Options" dialog.


Setup Audio Settings

- Click on [General Settings---Audio Settings] to select the audio setup page.
- Select the Microphone source as "USB audio CODEC".
- Uncheck the "Automatically adjust microphone settings" check box, and adjust the to volume 8~9 mark.
- Select the Speaker output as "USB audio CODEC".
- Uncheck the "Automatically adjust speaker settings" check box, and adjust the volume to 8~9 mark.

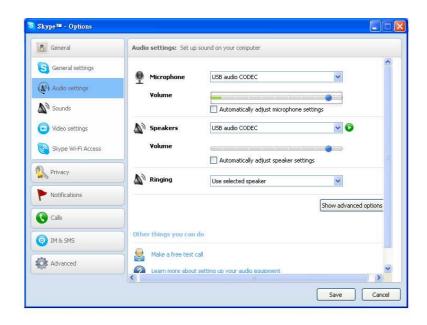


Setup Call Settings

- Click on [Calls---Call Settings] to select the call settings setup page.
- Click on "Only allow people in my Contact list to call me" to deny unauthorized callers.

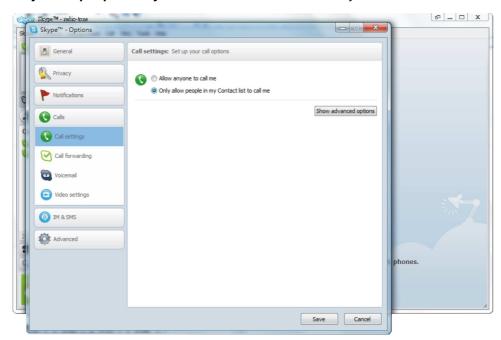


- Click on [Show advanced options] to open the "advanced option" page.
- Click on "Answer incoming calls automatically" to answer incoming calls automatically.
- Click on [Save] to save the settings.

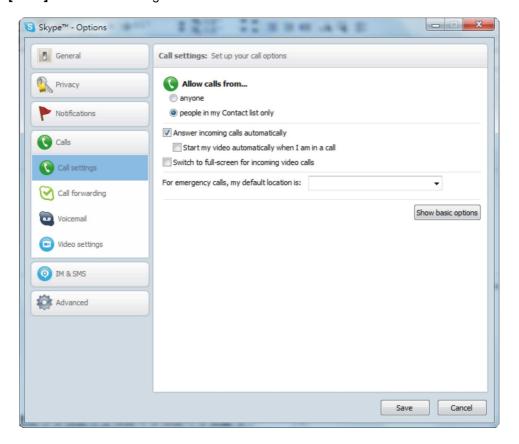

5. Add Contact

- Click on [Contacts] to open the "Add a contact" page.
- Enter the other site account name on the computers.

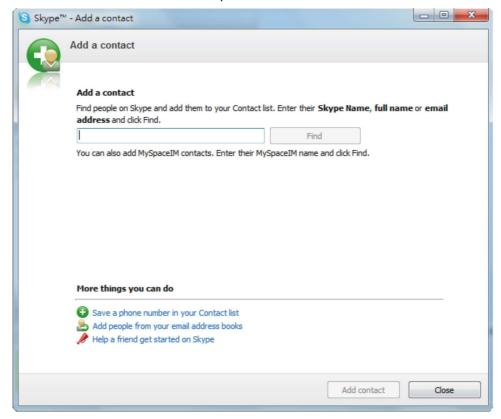

6. Establish The Link

- Click on the added contact name.
- Click on **[Call]** button to make a call to the other site computer, the other site computer will answer the call automatically for establishing a link.
- Now any one can talk to each other on both sites.