

Radio-Tone Series Repeater Controller Password Setup Quick Guide



Setup Steps:

- Connect a Radio Unit to the [RX] Terminal(RT-FDR1), [A TX/RX] Terminal(RT-CRC1) or [Input] Terminal(RT-SRC1).
- Turn on the Radio Unit and the Repeater Controller. The status indicator of the Repeater Controller will BLINK with **ORANGE** color for approximate 20 seconds. **Please note that the setup MUST be within the status indicator BLINK with ORANGE color period. If the status indicator changed to BLINK with GREEN color, the setup operation is disabled.**
- Adjust the frequency of another handheld to the same frequency of the repeater Radio Unit.
- Push and hold the PTT switch of the handheld unit(must has DTMF encoding function). The status indicator of the Repeater Controller will be changed to LIGHT UP with **RED**(RT-FDR1 and RT-CRC1) or **GREEN**(RT-SRC1) color.
- Key-in a 4-digit password followed by the "#" character, for example "8888#". The status indicator of the Repeater Controller will change to **ONE SHORT BLINK with RED** color for acknowledgement.
- After released the PTT switch of the handheld unit, the new password will be saved to the memory of the Repeater Controller.
- The Repeater System can be turned **OFF** by sending the new password follow by the "*" character, and turned **ON** follow by the "#" character.